

NOTE:

Please read all instructions carefully before
using this product

AeroCreeper




Adjustable Height Creeper

AC1001

AC1001A

AC1002

   AC1003

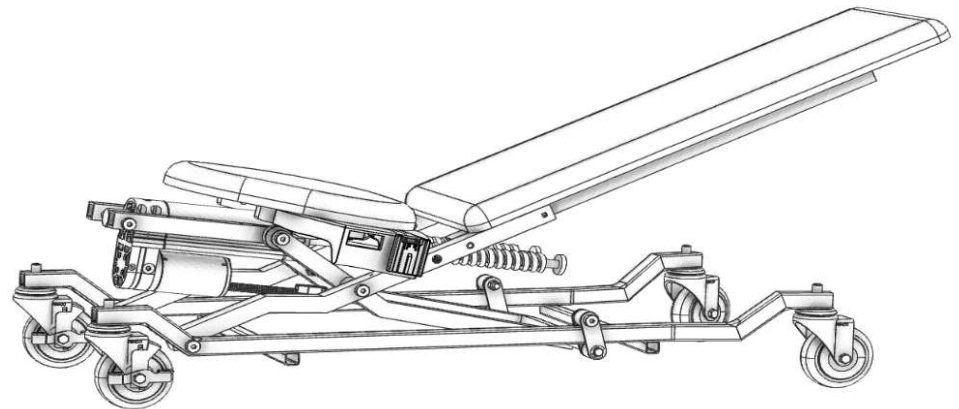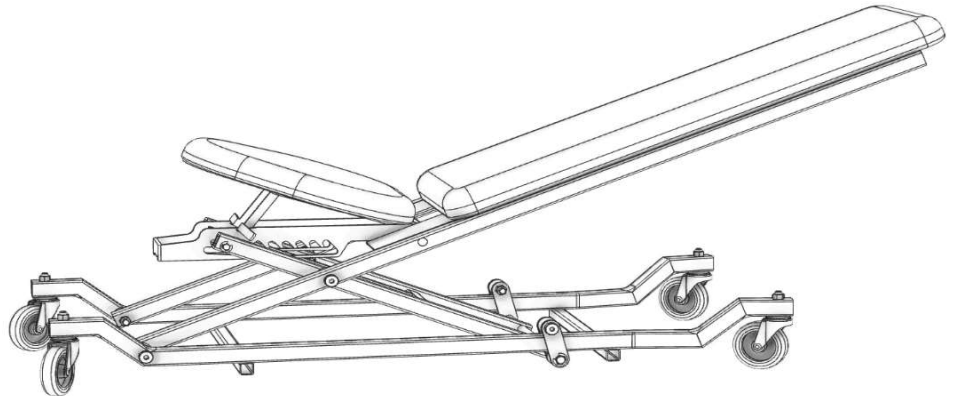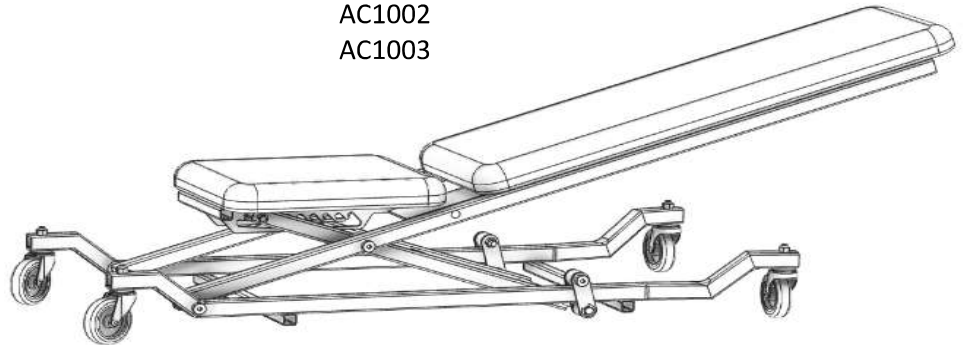

OWNER'S MANUAL

Retain This Manual for Reference

AEROCREEPER

2709 Mule Ranch Cir

Corinne, UT 84307

Tel: (435) 744-1019

<http://www.aerocreeper.com>

support@aerocreeper.com

Table of Contents

BEFORE YOU BEGIN..... 2

IMPORTANT SAFETY NOTICE.....2

AEROCREEPER CARE AND MAINTENANCE.....3

 Cleaning..... 3

 Annual inspection recommendations:.....3

AEROCREEPER OPERATION GUIDELINES.....3

 Adjusting the Manual AeroCreeper (AC1001, AC1001A, AC1002)..... 3

 Adjusting the Power-Lift AeroCreeper (AC1003)..... 5

 Using the AeroCreeper (AC1001, AC1001A, AC1002, AC1003)..... 6

 Transporting the Creeper (AC1001, AC1001A, AC1002, AC1003).....7

WARNING LABEL PLACEMENT..... 8

RETURN & REFUND POLICY..... 9

1-YEAR MANUFACTURER’S WARRANTY.....9

BEFORE YOU BEGIN

Thank you for selecting the AeroCreeper. For your safety and benefit, read this manual carefully before using the creeper. As a manufacturer, we are committed to provide you with complete customer satisfaction. If you have any questions, or find there are missing or damaged parts, we guarantee you complete satisfaction through direct assistance from our factory.

1-435-744-1019

Mon. – Fri. 8 a.m. – 5 p.m. MST

www.aerocreeper.com

support@aerocreeper.com

IMPORTANT SAFETY NOTICE

This AeroCreeper is built for optimum safety. However, certain precautions apply whenever you operate the AeroCreeper. Be sure to read the entire manual before you operate your creeper. In particular, note the following safety precautions:

- 1. Keep children and pets away from the equipment at all times. DO NOT leave children unattended in the same room with the creeper.**
2. Only one person at a time should use the equipment.
3. Position the equipment on a level surface.
4. Keep hands away from all moving parts.
5. Beware of loose clothes, loose skin or long hair that could be caught in the wheels.
6. Use the creeper only for its intended use as described in this manual.
7. Keep all sharp objects away from the seat cushions.
8. Inspect for any loose or broken pieces. Never operate the creeper if the creeper is not functioning properly.
9. Be aware of cracks, debris or tools on the floor that could cause tipping hazards when the creeper is in the upper positions.
- 10. Max capacity of creeper is 350lb (155 kg). This includes your body weight and any additional force applied (e.g. pushing on a wrench, rivet gun, etc.)**
- 11. Do not drop down onto the creeper or bounce while using the creeper.**

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm

SAVE THESE INSTRUCTIONS.

AEROCREEPER CARE AND MAINTENANCE

With some minimal care and maintenance, your AeroCreeper should serve well for many years to come.

Cleaning

Clean the upholstery pads and other surfaces with a damp cloth. Test any cleaner in a hidden area to ensure it won't damage or discolor the vinyl pads. Some solvents and cleaners may damage the upholstery.

Annual inspection recommendations

- ✓ Ensure that warning labels are in place and readable. (See "Warning Label Placement" on page 8). Replacement labels can be acquired at www.aerocreeper.com or email support@aerocreeper.com.
- ✓ Clean and inspect the unit for signs of excessive wear, cracked welds, and loose or missing fasteners.
- ✓ Check wheels for excessive wear. Replace if necessary.
- ✓ Manual-adjusting models only: Check positioning teeth that are under the seat for signs of overloading or deformation. Replace if any teeth have been damaged to the point that they might not support the worker.
- ✓ Power-lift model only: Make sure the bolt in the end of the actuator rod is tight.

AEROCREEPER OPERATION GUIDELINES


Adjusting the Manual AeroCreeper (AC1001, AC1001A, AC1002)

WARNING:

- Make sure the seat is engaged before mounting.
- Do not adjust while seated (get off to adjust).
- Keep hands and fingers away from moving parts.


ADJUSTING THE CREEPER HEIGHT (AC1001 AND AC1001A)

To Raise Creeper

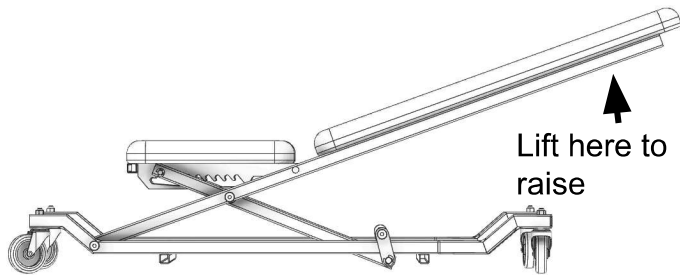

Let seat engage at desired height. Ensure locked in position before mounting.


To Lower Creeper

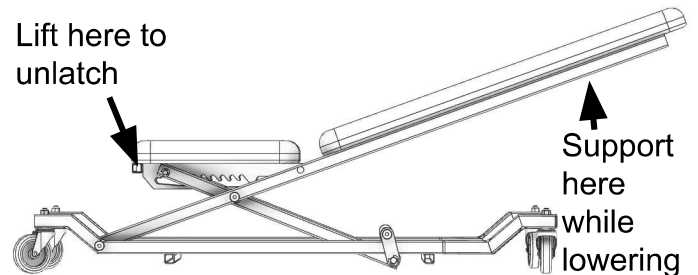

Let seat engage at desired height. Ensure locked in position before mounting.


ADJUSTING THE CREEPER HEIGHT (AC1002)

To Raise Creeper

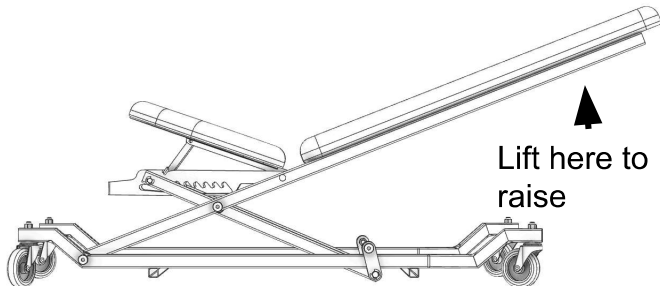

Let teeth engage at desired height. Ensure locked in position before mounting.


To Lower Creeper

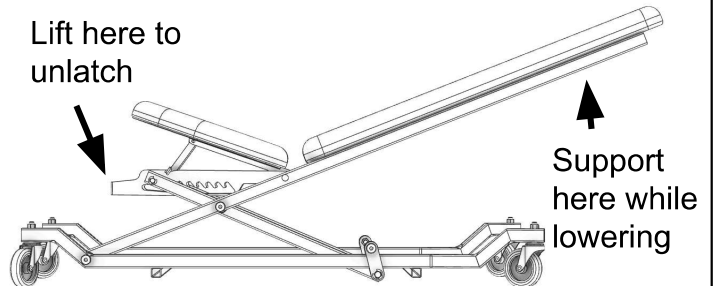

Let teeth engage at desired height. Ensure locked in position before mounting.


ADJUSTING THE SEAT ANGLE (AC1002)

To Raise Seat Angle

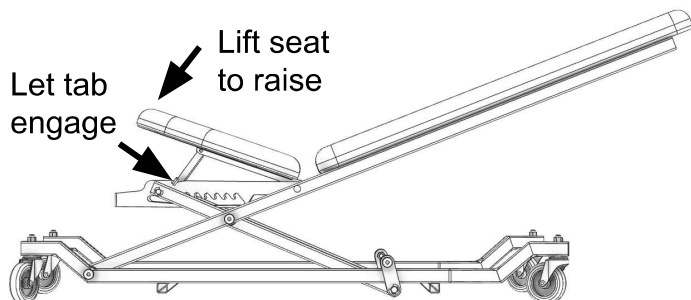

Ensure locked in position before mounting.

To Lower Seat Angle

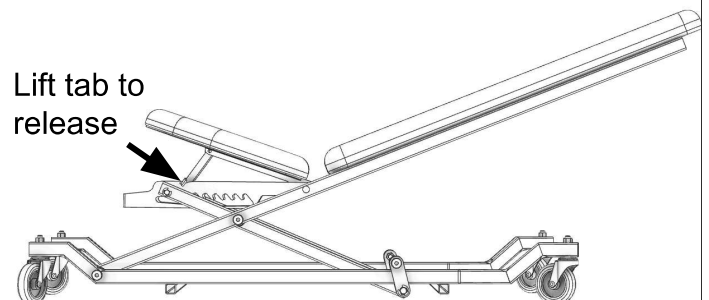


WARNING: Be cautious about not lifting on the front of the seat while on the creeper to avoid unintentionally lowering the creeper while you are on it. This can be done unintentionally by someone who is not familiar with the creeper as they try to adjust it or move around on it.

Adjusting the Power-Lift AeroCreeper (AC1003)

WARNING:

1. **Use caution when adjusting the Power-Lift AeroCreeper while under equipment to prevent the creeper from raising you into the bottom of equipment.**
2. Whenever possible, you should adjust to the desired height before rolling under equipment. This will prevent the creeper from going up too fast causing you to crash into the bottom of the equipment.
3. The creeper is designed with a rocker switch and a safety button. Both must be pressed to adjust the creeper. The safety button helps prevent accidental movement and keeps hands in a safe position while adjusting.*
4. **Before each use, test the button and the rocker switch in both directions to ensure that neither are sticking and that the creeper will not move when only one is pressed.***
5. **Never bypass safety switches.**
6. If the creeper is not working as intended (e.g., if there is any undesired movement), stop using immediately.
7. Be aware there is a potential for the creeper to fail to raise while in the bottom position (e.g., the battery runs out of charge). If you are disabled and rely on the creeper to raise you up, always have an alternate option to get up (e.g., have a spare battery, have someone nearby to help, keep a cell phone with you, etc.)
8. Be aware that sparks may occur in the electrical connections. Keep away from flammable materials.


ADJUSTING THE CREEPER HEIGHT (AC1002)

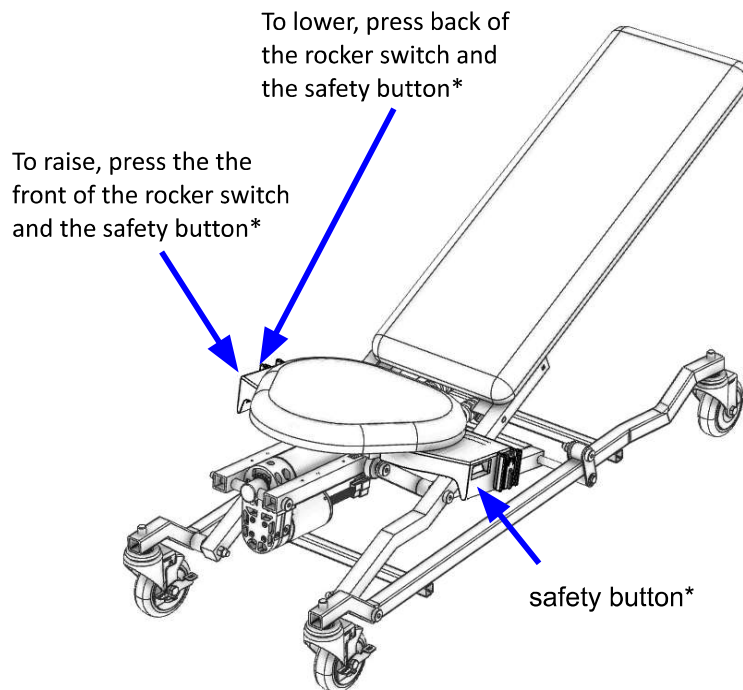


*Older models have a rocker switch on both sides (no button) which must be pressed simultaneously.

Using the AeroCreeper (AC1001, AC1001A, AC1002, AC1003)

WARNING: When adjusting the creeper, make sure your hands are located as shown in the diagram to avoid injury to hands and fingers. Diagram below shows Safe Zones for hands and fingers and Danger Zones.

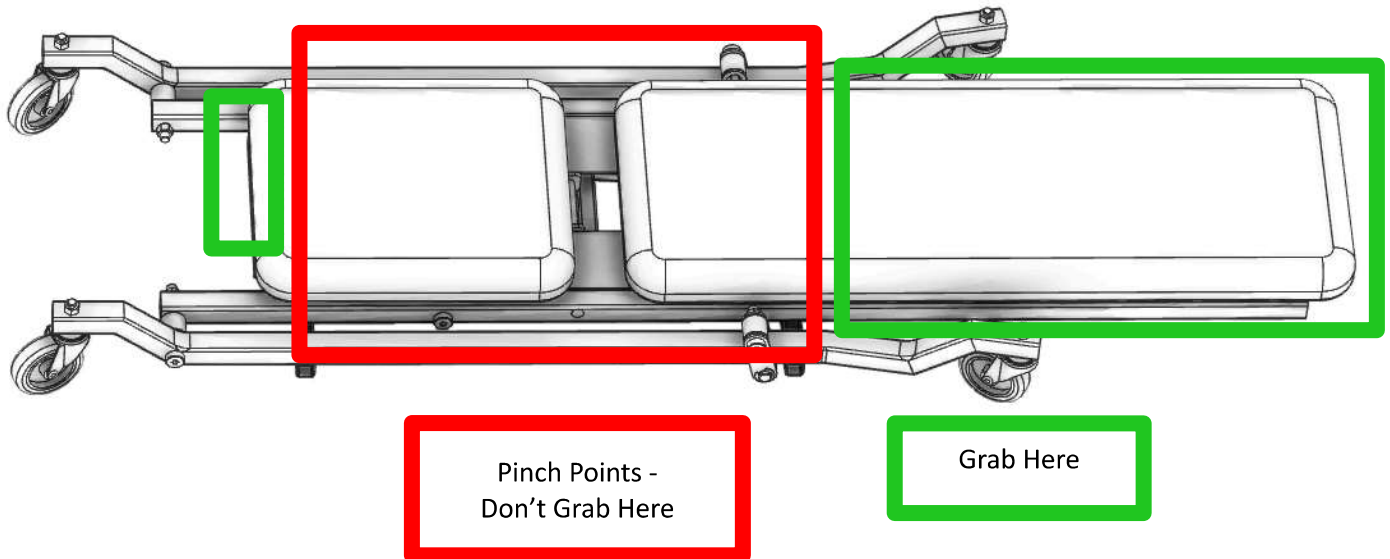


WARNING: When using the creeper in the lower position, beware of potential hazards caused by the casters. Long hair and loose clothing can get caught in the casters. Avoid hitting arms and shoulders on caster fasteners. Loose skin can get caught on the top side of the caster between the metal caster housing and the wheel. If this is a concern, skin guards are available at www.aerocreeper.com.

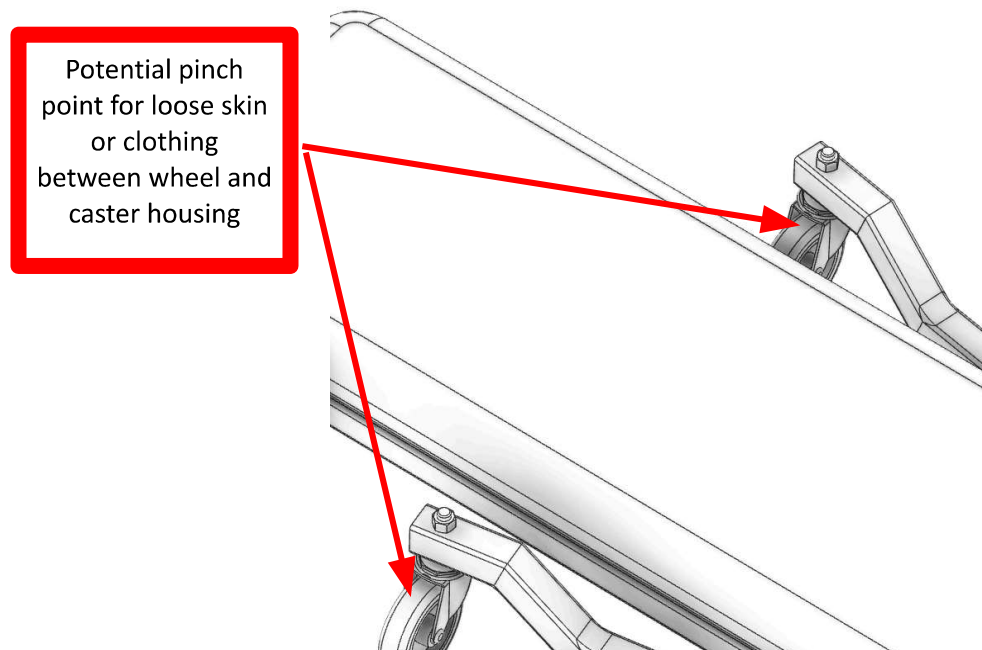


WARNING: Beware that when sitting on the creeper, the back of the creeper sticks out and as you rotate, could cause injury or damage to property. The red zones in the images below show the area that should be clear to avoid injury or property damage when spinning around.

When sitting on the creeper while it is in the top positions, the back casters stick out as shown in the picture below.

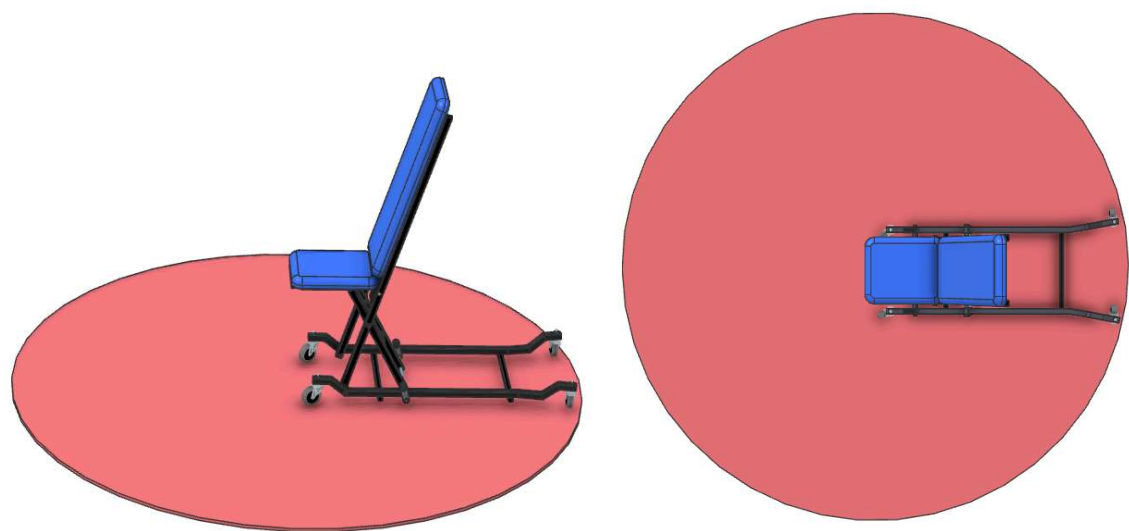

When sitting on the creeper while it is in the middle and lower positions, the backrest sticks out as shown in the picture below.

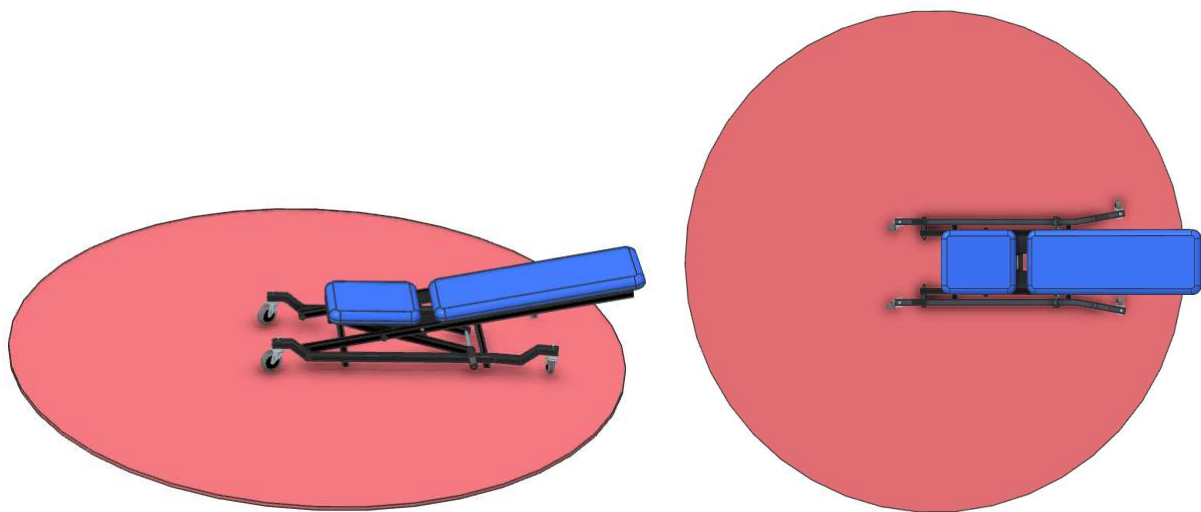


Transporting the Creeper (AC1001, AC1001A, AC1002, AC1003)

Push like a shopping cart to move around the shop.		Carry under arm to keep it from opening up.	
--	---	---	---

WARNING: Failure to transport creeper as shown could cause the creeper to open and close, injuring hands and fingers.

WARNING LABEL PLACEMENT

The following warning labels should be placed as shown. If the labels are missing or illegible, please call customer service (<https://www.aerocreeper.com/contact-us>).

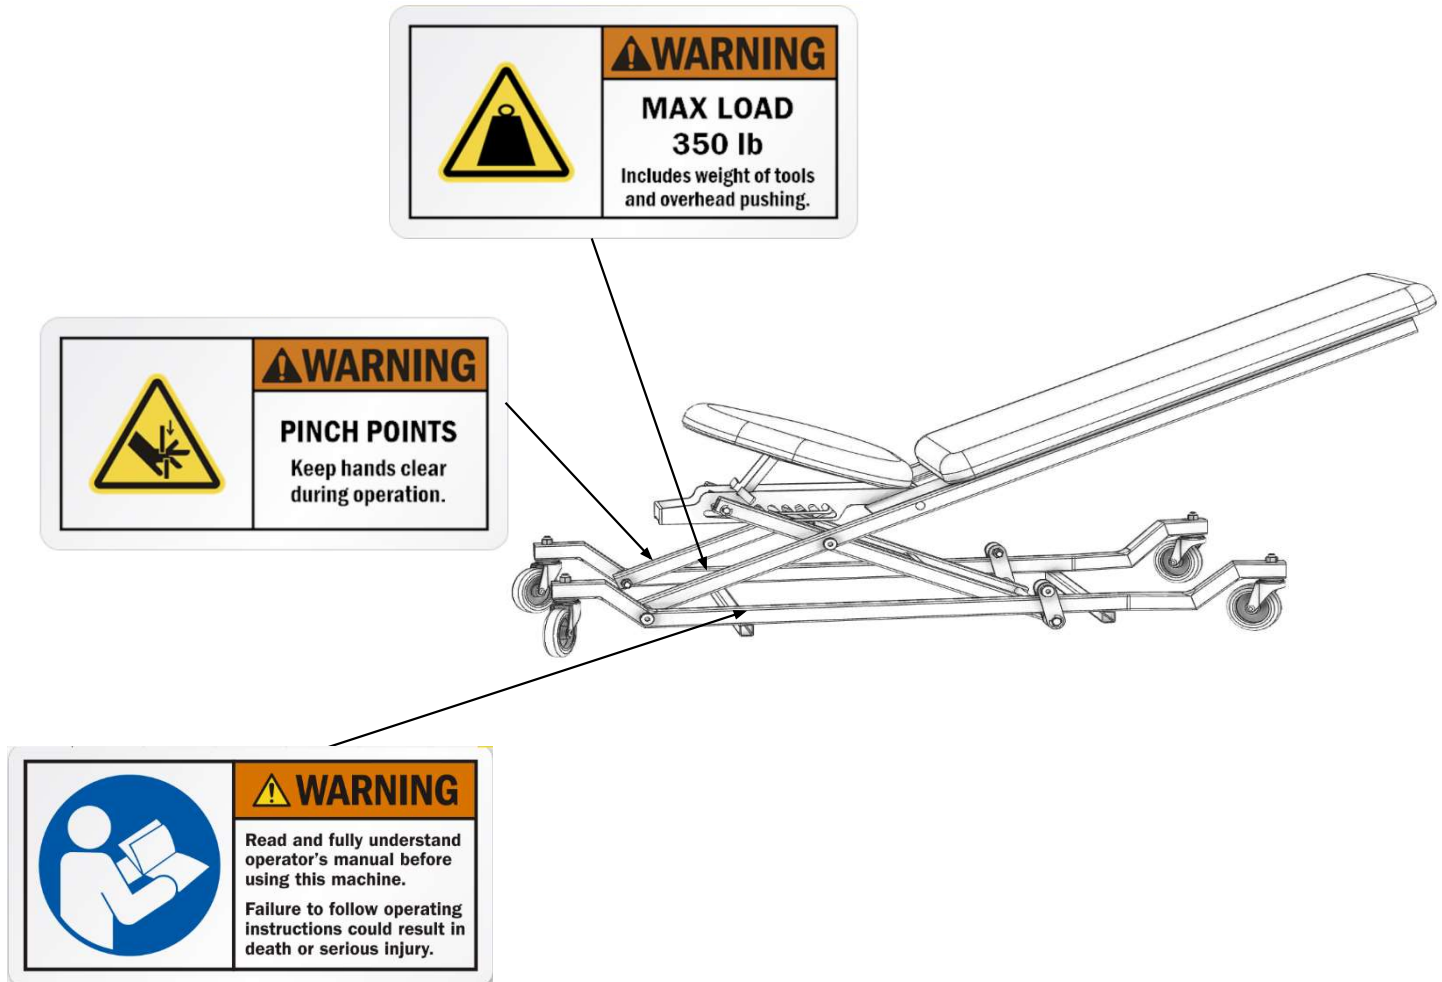

RETURN & REFUND POLICY

If for any reason you are not satisfied with your AeroCreeper, you may return it within 30 days for a full refund. To be eligible for a refund, the creeper must be in good condition and returned in its original packaging.

Details: Contact us through our website (<https://www.aerocreeper.com/contact-us>) and provide your email address for a return authorization. Once you receive the return authorization, ship the packaged creeper to our address. Upon receipt, we will inspect it. If it is in good condition, we will initiate a refund to your credit card (or original method of payment) of the full purchase price – not including shipping charges.

1-YEAR MANUFACTURER'S WARRANTY

At AeroCreeper, we stand by our products and take pride in our customer service. If we did something wrong, we'll make it right. We guarantee that our product will be free of defects in materials and manufacturing (excluding normal wear & tear).

Details: Warranty is valid for 1 year from date of purchase. This warranty does not apply to damage caused by misuse, abuse, negligence, alteration, or natural disasters (i.e., flooding, earthquakes). To take advantage of this warranty, contact us through our website (<https://www.aerocreeper.com/pages/contact>) with an explanation of the complaint.

AeroCreeper may require photographs to verify the materials or manufacturing defects. Depending on the nature of the defect, we may provide replacement parts that you will install or a replacement creeper. If we cannot readily and quickly provide you with a solution, we may elect to refund the purchase price.

Once the warranty expires all liability will be terminated. No other warranties are expressed or implied.

Due to the cost of shipping, customers outside of the contiguous 48 states will bear the cost for shipping parts, replacements, and returns.