

POWERUP MAGNETO REPAIR KITS

BENDIX SERIES S-24 & S25

Magneto P/N	Magneto Type	Repair Kit P/N	Kit Price
10-79020-5	S6R(L)N -24,25	07-00864	---
10-79020-6			
10-79020-8			
10-79020-10			
10-79020-11	S6LN -25	07-00868	---
10-79020-13	S6R(L)N -24, -25	07-00864	---
10-79020-14			
10-79020-16			

Magneto P/N	Magneto Type	Repair Kit P/N	Kit Price
10-79020-17	S6LN -25	07-00868	---
10-79020-18			
10-79020-118			
10-79020-19	S6RN-25	07-00866	---
10-79020-119			

BENDIX SERIES S-200

Magneto P/N	Magneto Type	Repair Kit P/N	Kit Price
10-163005-1	S4R(L)N-200*	07-00844	---
10-163005-2			
10-163005-3			
10-163005-4			
10-163005-5			
10-163005-7			
10-163005-10			
10-163015-1	S4R(L)N-201*	07-00844	---
10-163015-2			
10-163015-3			
10-163015-4			
10-163045-1	S4LN -204	07-00757	---
10-163045-2	S4RN -204	07-00846	---
10-163045-3	S4LN -204	07-00757	---
10-163045-4	S4RN -204	07-00846	---
10-163045-6	S4LN -204	07-00757	---
10-163045-7	S4RN -204	07-00846	---
10-163055-1	S4RN -205	07-00846	---
10-163055-2	S4LN -205	07-00757	---
10-163010-1	S6R(L)N -200*	07-00849	---
10-163010-2			
10-163010-3			
10-163010-4			
10-163010-5			

Magneto P/N	Magneto Type	Repair Kit P/N	Kit Price
10-163010-6	S6R(L)N -200*	07-00849	---
10-163010-7			
10-163010-8			
10-163010-9			
10-163010-10			
10-163010-11			
10-163010-15			
10-163010-17	S6R(L)N-201*	07-00849	---
10-163020-2			
10-163020-3			
10-163020-4	S6R(L)N-204	07-00849	---
10-163030-1			
10-163030-4	S6LN-204	07-00853	---
10-163050-1			
10-163050-2			
10-163050-3	S6RN -204	07-00851	---
10-163050-5			
10-163050-6	S6LN -204	07-00853	---
10-163050-7			
10-163050-8	S6RN -205	07-00851	---
10-163050-9			
10-163060-1	S6RN -205	07-00853	---
10-163060-2			
10-163070-1	S6RN -206	07-00853	---
10-163070-3			

*The Repair Kit and Deluxe Repair Kit for the Bendix -200, -201, and -202 Series Magnetos contain two sets of Contact Assembly Kits.

REPLACEMENT PARTS FOR BENDIX MAGNETOS FROM POWERUP

Part No.	Description	Price	Part No.	Description	Price	Part No.	Description	Price	Part No.	Description	Price
07-06301	Bearing	---	07-06326	Distributor Block	---	08-14664	ES10-382618 Nut	---	08-15862	ES10-382785 Connector Strip	---
10-357078	Bushing	---	07-06327	Vent	---	08-14665	ES10-17050 Washer	---	08-15863	ES10-382787 Bearing Retainer Plate	---
10-357164	Coil	---	10-50737	Spring	---	08-14666	ES10-35937 Screw	---	08-15864	ES10-382931 Coil Retention Spring	---
10-357165-1	Coil	---	07-06329	Felt Washer	---	08-14667	KA10-682024 Screw	---	08-15907	ES10-4093 Washer	---
10-35717-3	Breaker Points	---	07-06330	Plug	---	08-14668	ES10-400166-4	---	08-15910	ES10-682014 Gear Assy	---
10-35717-4	Breaker Points	---	10-51676	Capacitor	---	08-14669	ES10-400166-5	---	08-15911	ES10-682016 Gear Assy	---
07-06308	Capacitor	---	07-01066	Washer	---	08-14670	ES10-400167-8	---	08-15912	ES10-685548 Washer	---
10-52949	Distributor Block	---	07-06333	Washer	---	08-15840	AM-3015 Screw	---	08-15915	KA10-16092 Washer	---
07-06311	Breaker Points	---	07-06334	Distributor Block	---	08-15841	AM-3020 Screw	---	08-15916	KA10-35937-12 Screw	---
10-382584	Breaker Points	---	07-06335	Distributor Block	---	08-15842	AM-3183-1 Nut	---	08-15917	KA10-361639 Bushing	---
07-06313	Coil	---	07-06336	Bearing	---	08-15843	AM-3183-2 Washer	---	08-15918	KA10-382568 Strip	---
07-06314	Breaker Points	---	07-06325	Ring	---	08-15845	ES10-163048 Bushing	---	08-15919	109-2 3/4 Nut	---
07-06315	Breaker Points	---	07-06338	Ring	---	08-15846	ES10-349219 Wedge	---	08-15920	113-2 5/8 Nut	---
07-06316	Capacitor	---	07-06339	Bearing	---	08-15847	ES10-349248 Slinger, Oil	---	08-15921	148A Insulator	---
07-06317	Washer	---	07-06341	Bushing	---	08-15848	ES10-349392-1 Flange	---	08-15922	148B Brass Retainer	---
07-02453	Washer for Slick Mag	---	10-160844	Brush	---	08-15849	ES10-349392-2 Flange	---	08-15923	2391 Insulator & Retainer Assembly	---
07-06318	Coil	---	07-06344	Bushing	---	08-15850	ES10-349392-3 Flange	---	08-15924	2392 Insulator	---
07-06319	Capacitor	---	07-06345	Felt Strip	---	08-15851	ES10-349392-4 Flange	---	08-15925	2446-2 3/4 Elbow Assembly	---
07-06320	Gasket	---	07-06346	Packing	---	08-15852	ES10-349392-5 Flange	---	08-15926	2463-2 5/8 Elbow Assembly	---
07-06321	Bushing	---	07-06347	Capacitor	---	08-15853	ES10-349392-6 Flange	---	08-15927	70043 Ferrule	---
10-391088-1	Coil	---	07-06348	Washer	---	08-15854	ES10-349970 Breaker Points	---	08-15928	70044 Ferrule	---
07-06323	Gasket	---	07-06350	Breaker Points	---	08-15855	ES10-349971 Breaker Points	---	08-15929	70046 Ferrule	---
07-06324	Gasket	---	07-06351	Bearing	---	08-15856	ES10-35935-5 Screw	---			
07-06325	Distributor Block	---	08-12204	MF3A Ignition Filter Cap	---	08-15857	ES10-3793 Washer	---			